



## Wall Mount Bracket Instruction Manual

**Manufacturing:** Bypass & Filter Feeders, Glycol Feed Packages, Tanks, Tank Stands, Chemical Batch Mixers, Corrosion Coupon Racks and Custom Systems

Contents	Page
1.0 Introduction	1
2.0 Warranty	1
3.0 Unpacking	2
4.0 Location	2
5.0 Installation	2
6.0 Parts Listing	2

**\*\*\* WARNING – BEFORE YOU GET STARTED \*\*\***

- 1) All fasteners & fittings should be inspected and secured before operation as they may be loosened in transit
- 2) Personnel safety practices should apply at all times
- 3) Safety glasses or face shields and gloves should be worn
- 4) Do not service glycol feed package without disconnecting power
- 5) Close isolation valve and release pressure before servicing any components on the system
- 6) All liquids in system should be drained before servicing

**1.0 INTRODUCTION** Thank you for choosing General Treatment Products Residential Glycol Feed Package Wall Mount Bracket(s). For further information, please visit [www.gtpcompany.com](http://www.gtpcompany.com) or contact customer service.


**2.0 WARRANTY** General Treatment Products are guaranteed for two years from date of shipment against manufacturing defects in material and workmanship that develop in the service for which they are designed. We will repair or replace a defective part of this system when returned to our factory with freight prepaid; providing that the part is found to be defective upon inspection. We assume no liability for labor and/or other expenses in making repairs or adjustments.

**3.0 UNPACKING** Upon receipt of order, inspect package thoroughly. In the event there was damage incurred in transit you must notify the freight company within **3-5 days of receipt of order**. Once system is inspected for damage and received in good condition, and store indoors until installing.

**4.0 LOCATION AND ENVIROMENT** Although some of the components are NEMA rated, the power cord(s) should not be exposed to direct elements. In all cases a shelter, awning or shed needs to be installed to validate warranty.

## 5.0 INSTALLATION **BE SURE THAT ALL MOUNTING AND HARDWARE COMPLIES WITH LOCAL CODES**

Once location is decided on, wall mount hangers need to mount to dry wall with dry wall mollies (not included). Wall mount hangers do not support glycol feed package, only there to hold in place. Mount lower bracket assembly 21" from hanger shelf. Using the 3/8" pilot holes, secure lower bracket with 3/8x1.5" lag bolts (minimum).

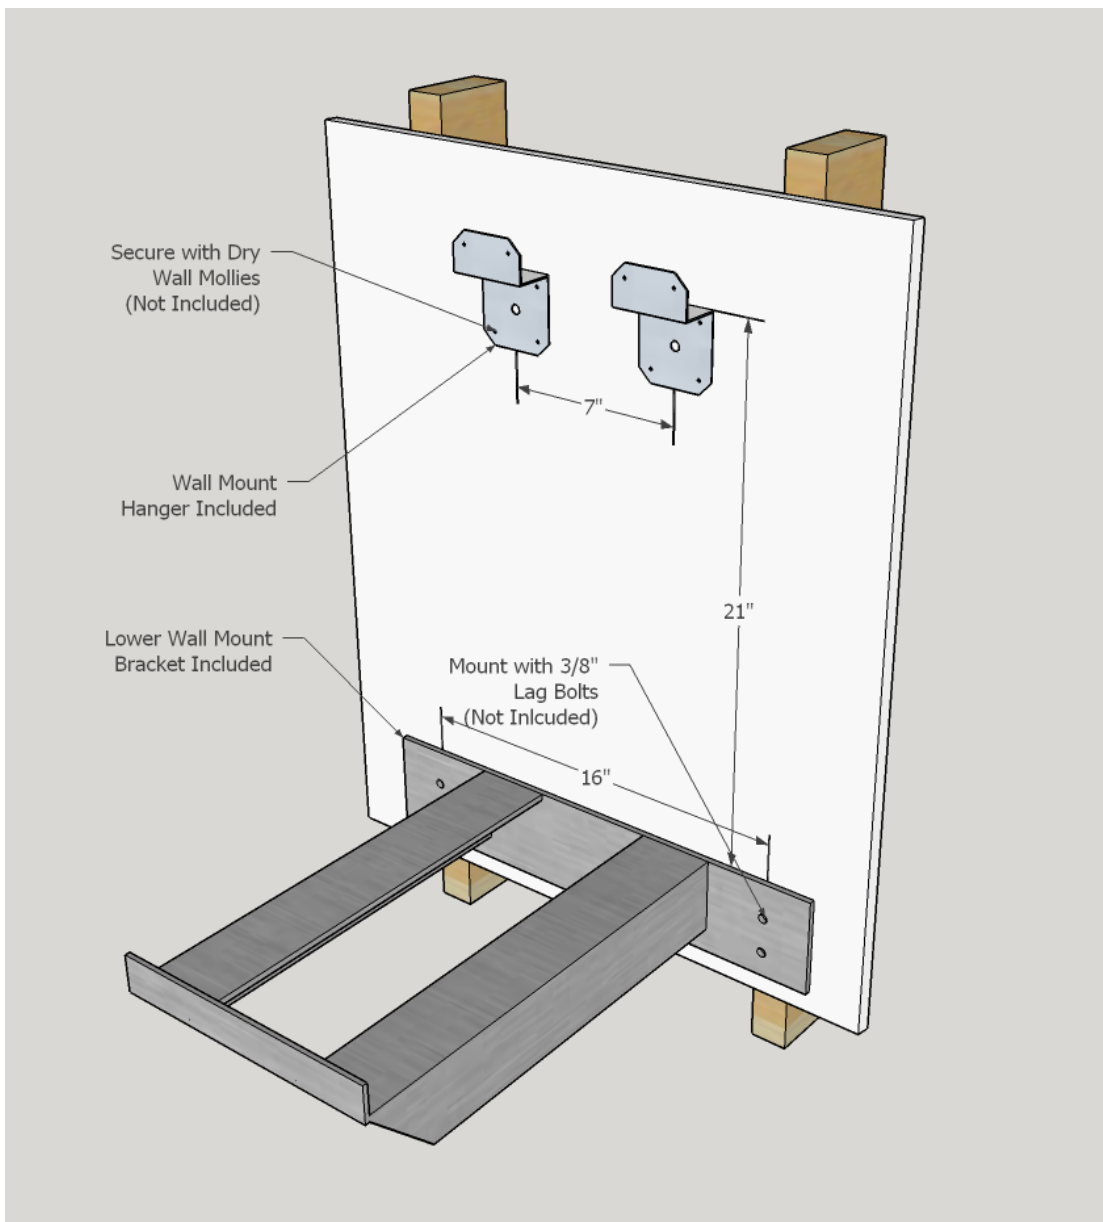

**5.1 POLY CONTAINMENT/MOUNT SHELF** Once brackets are secured to wall as shown above. Place the polyethylene containment shelf through the handhole molded in the upper back. The lower basket should fit snugly into the low bracket assembly.

**6.0 PARTS LISTING** Parts, such as hardware and new mount brackets are available upon request. Please have model and serial number available when requesting parts.

P.O. Box 8697, Brea, CA 92822-5697 ♦ Phone: 714) 257-9165  
113 Viking Ave., Brea, CA 92821 ♦ Fax: 714) 257-9215  
[www.gtpcompany.com](http://www.gtpcompany.com) ♦ [customerservice@gtpcompany.com](mailto:customerservice@gtpcompany.com)

**General Treatment Products, Brea, CA 92821**  
O&M Manual WMBRACKET Rev 0220, Page 2 of 2